

Quick Setup Guide

DC50X-HD, DC65X-HD, DC85X-HD, DC130X-HD

1 Air flow

Air needs to flow freely in and out of the compressor area so the heat can escape (Refer owner's manual pages 3 and 6 for minimum ventilation requirements).

2 Radiant Heat

Check the fridge location for radiant heat. For the best canopy installation use wall and ceiling insulation with canopy air vents, for a caravan or van insulate the external wall directly behind the fridge.

3 Wire Direct

Wire the compressor directly to your battery terminals on a fully dedicated circuit only. (Refer owner's manual page 2).

4 Door Alignment

If the door is removed or hinges are swapped from right to left, re-align the door, and adjust the door catch. This could be necessary after a shakedown cruise. (Refer owner's manual page 4).

5 Thermostat

Start on setting 2 and wait 24 hours. Adjust upwards 1 notch at a time if your drinks are not cold. Try to use the lowest number possible and don't go above 6! (Refer owner's manual page 3)

6 Packing

Arrange items in the fridge so there is space for the cold air to circulate, especially on the top shelf. Avoid using solid plastic tubs or foam packages as they block air movement. (Refer owner's manual page 3).



Need a hand? Check out our how to guides



T +61 3 8080 9990

E info@bushman.com.au

bushman.com.au